



# ELECTRICAL WIRING ROUTING

- : Location of Connector Joining Wire Harness and Wire Harness
- ▽ : Location of Ground Points


[5S-FE]

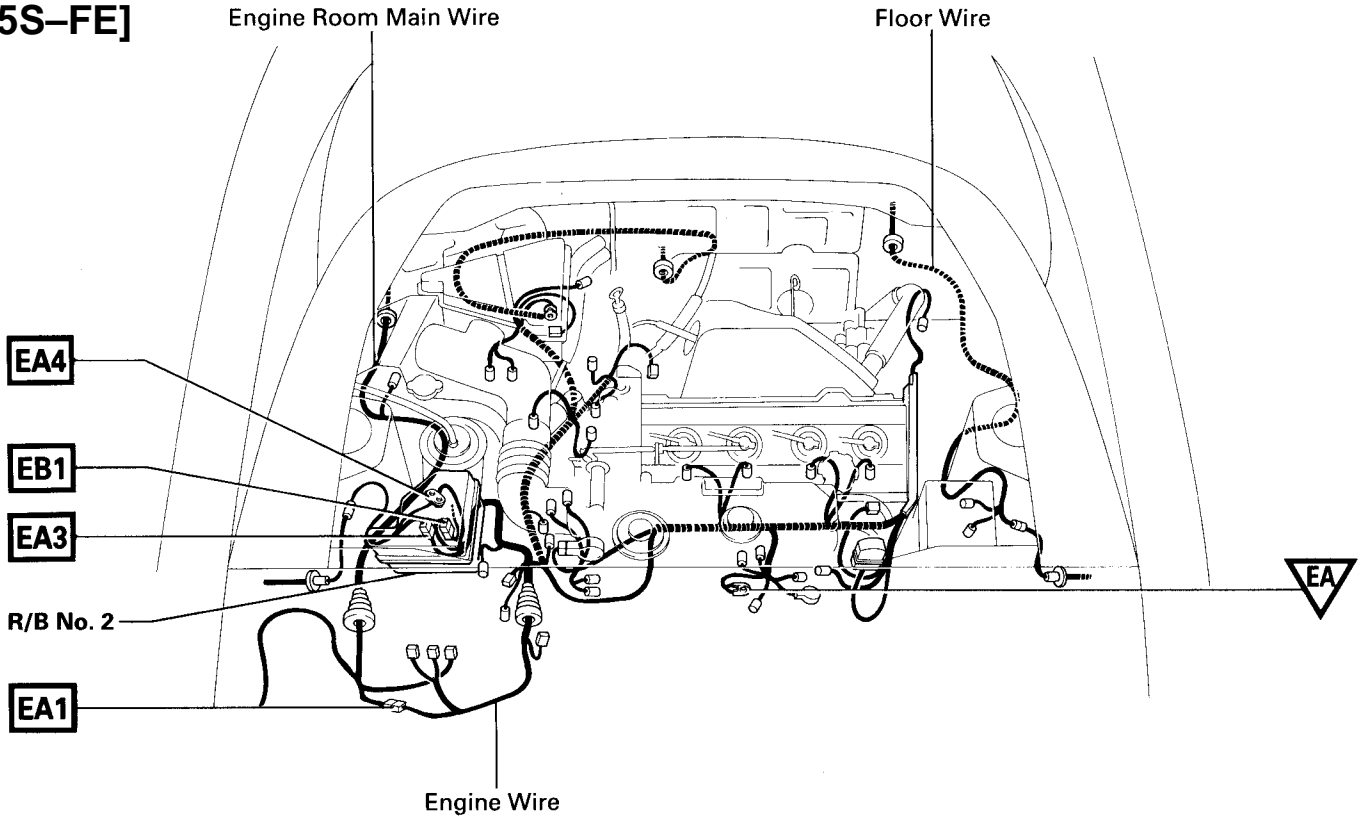

- : Location of Splice Points

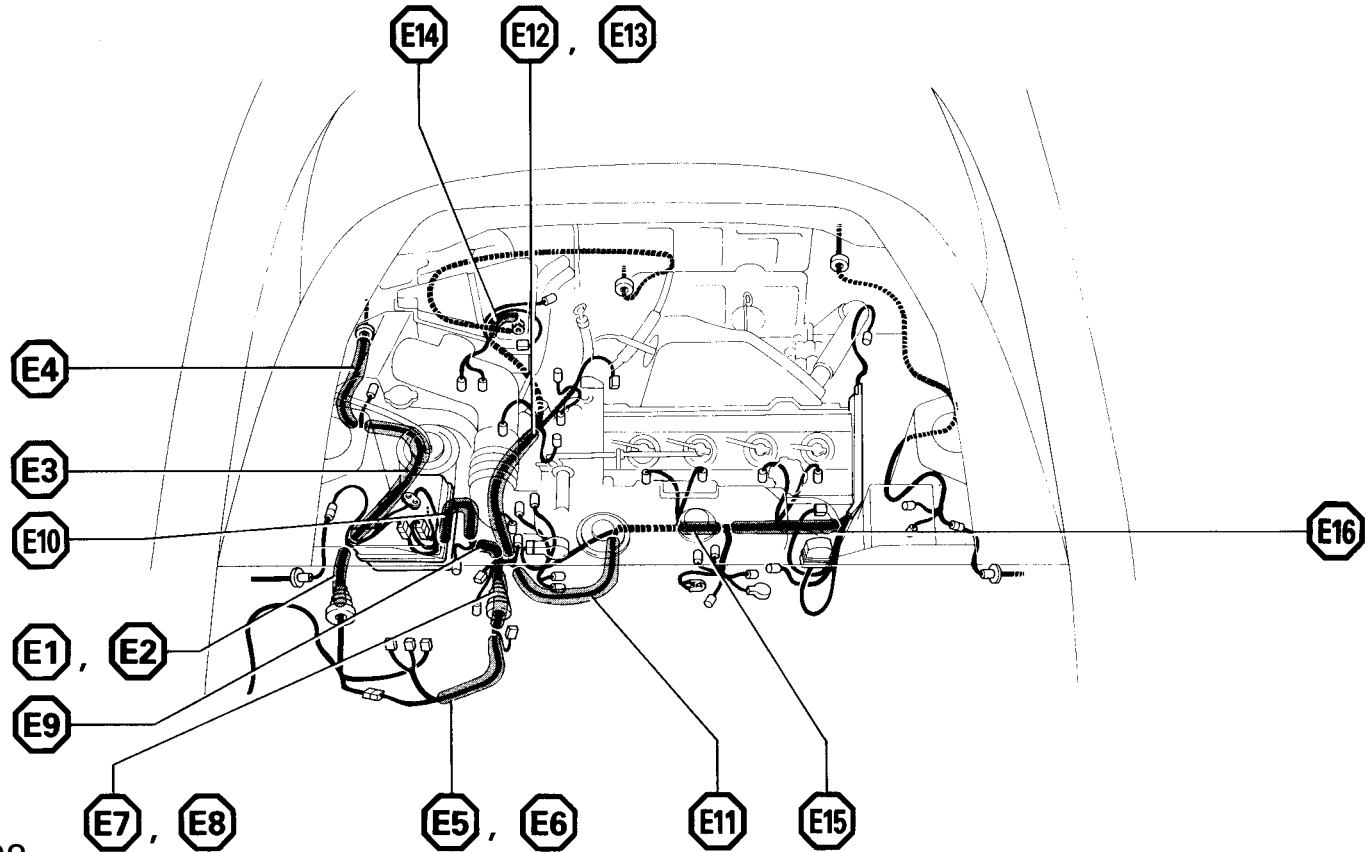

# Connector Joining Wire Harness and Wire Harness

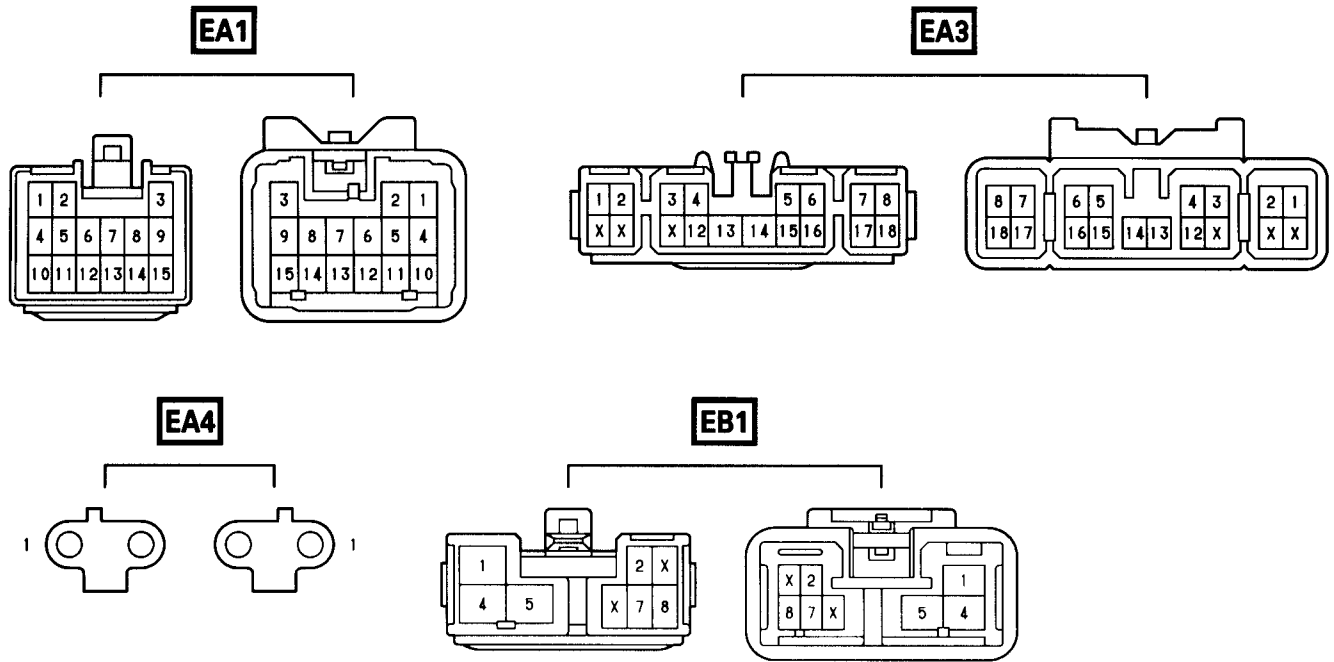


CODE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
EA1	ENGINE ROOM MAIN WIRE AND ENGINE WIRE (REAR LUGGAGE COMPARTMENT LEFT)
EA3	ENGINE WIRE AND ENGINE ROOM MAIN WIRE (R/B NO. 2 INNER)
EA4	
EB1	ENGINE WIRE AND R/B NO. 2 (R/B NO. 2 INNER)


# ELECTRICAL WIRING ROUTING

- : Location of Connector Joining Wire Harness and Wire Harness
- ▽ : Location of Ground Points


## [3S-GTE]

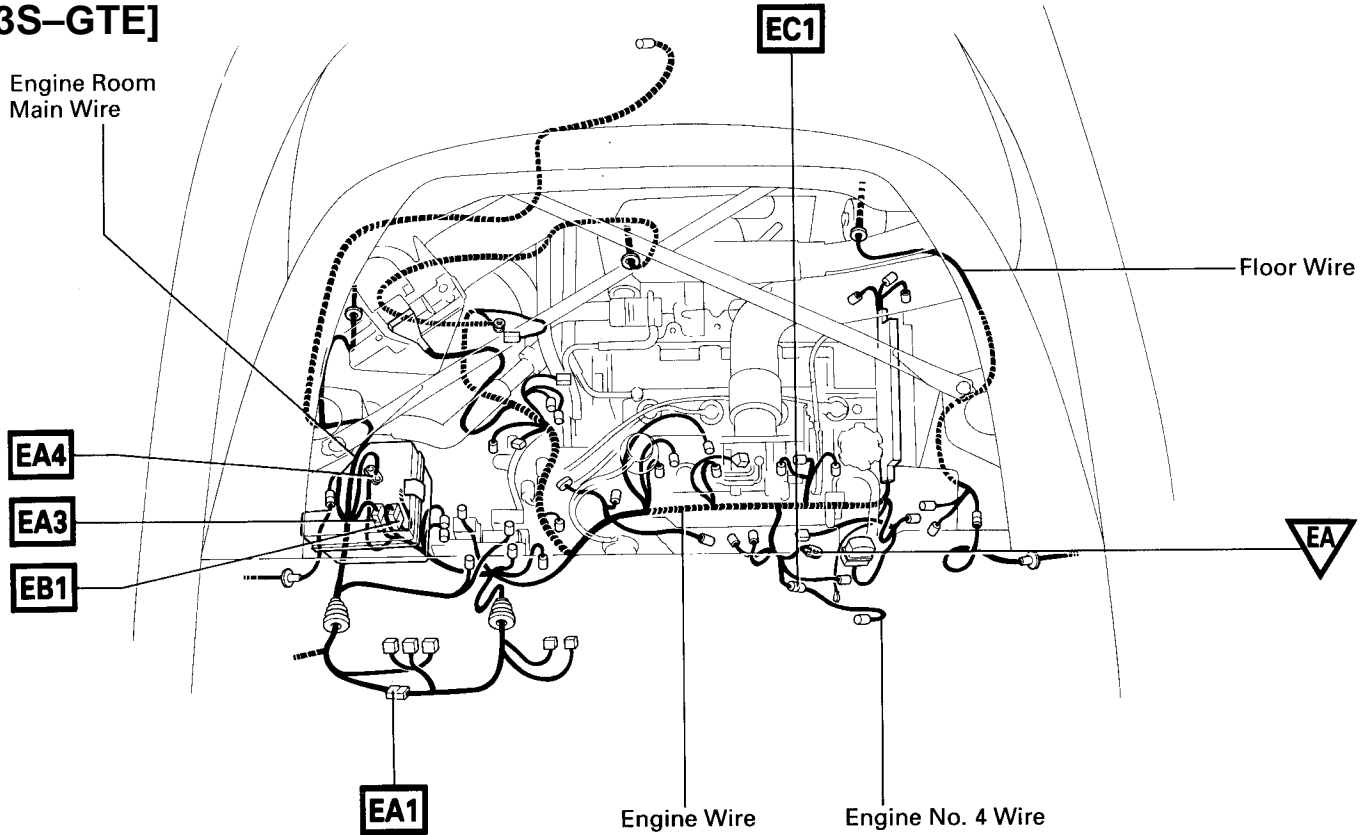

- : Location of Splice Points

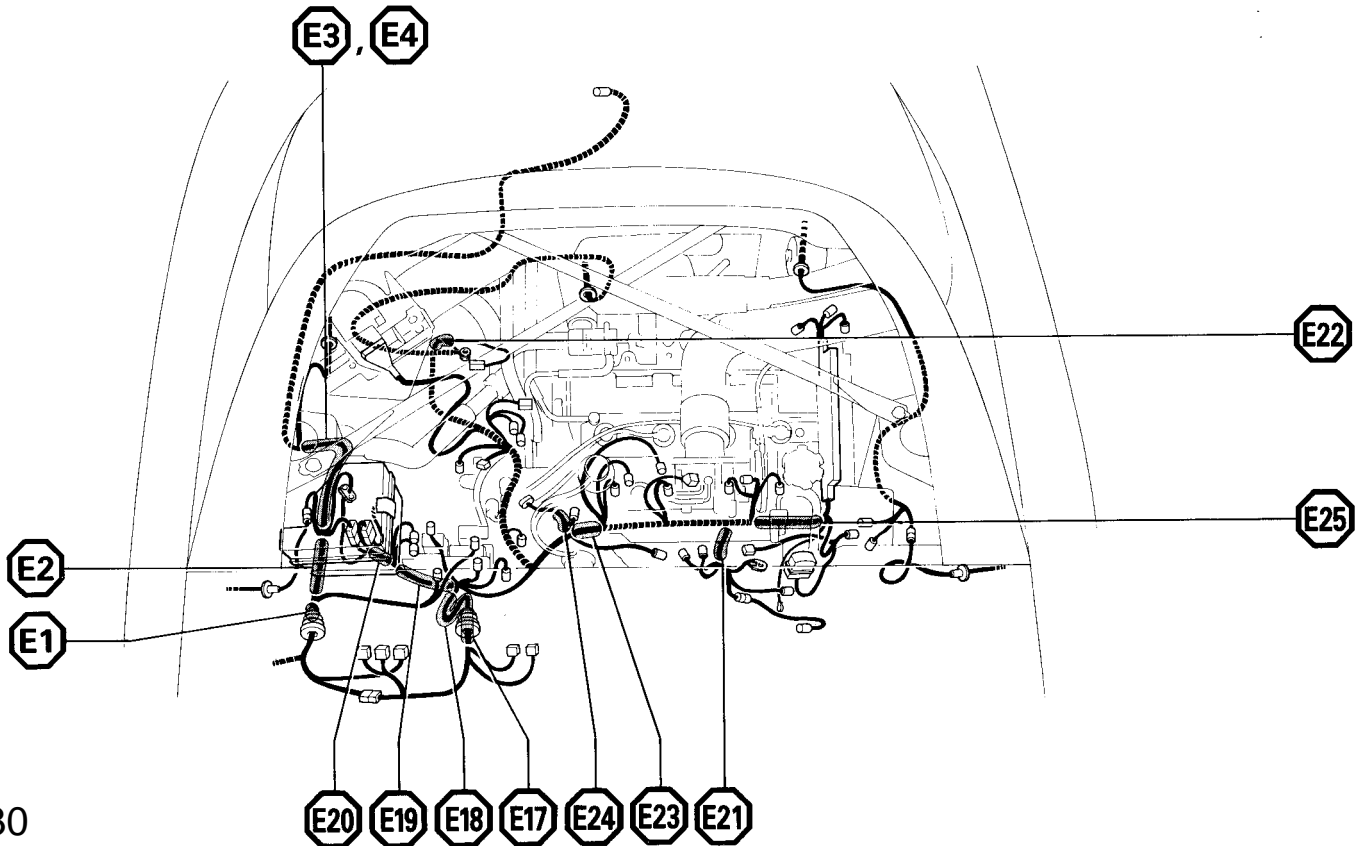


## Connector Joining Wire Harness and Wire Harness

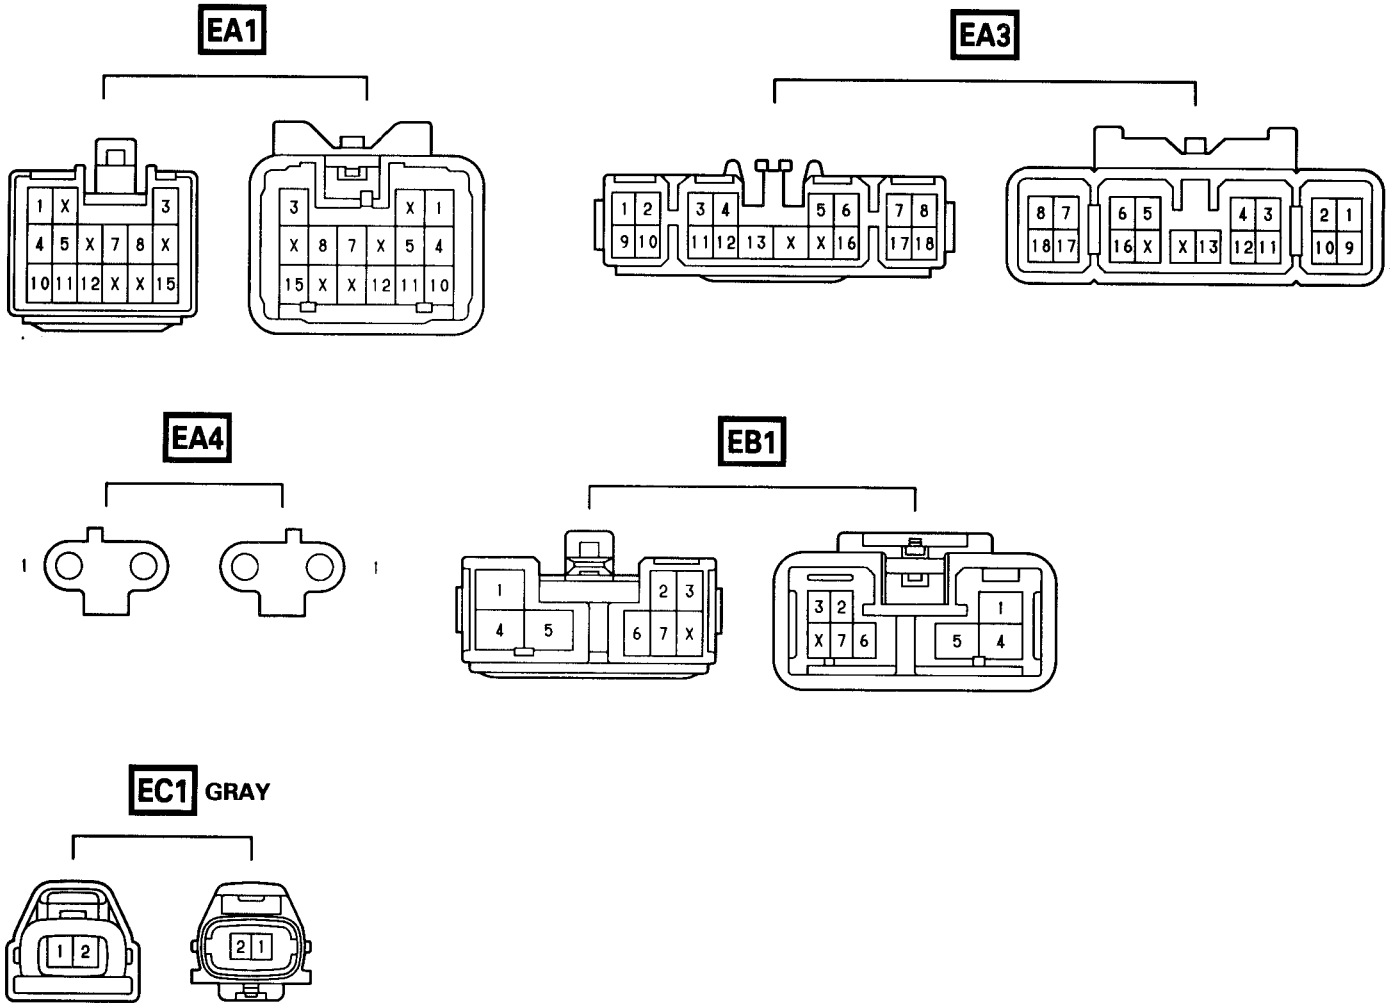


CODE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
EA1	ENGINE ROOM MAIN WIRE AND ENGINE WIRE (REAR LUGGAGE COMPARTMENT LEFT)
EA3	ENGINE WIRE AND ENGINE ROOM MAIN WIRE (R/B NO. 2 INNER)
EA4	ENGINE WIRE AND ENGINE ROOM MAIN WIRE (R/B NO. 2 INNER)
EB1	ENGINE WIRE AND R/B NO. 2 (R/B NO. 2 INNER)
EC1	ENGINE WIRE AND ENGINE NO. 4 WIRE (NEAR THE INTAKE MANIFOLD)

# ELECTRICAL WIRING ROUTING


□ : Location of Connector Joining Wire Harness and Wire Harness

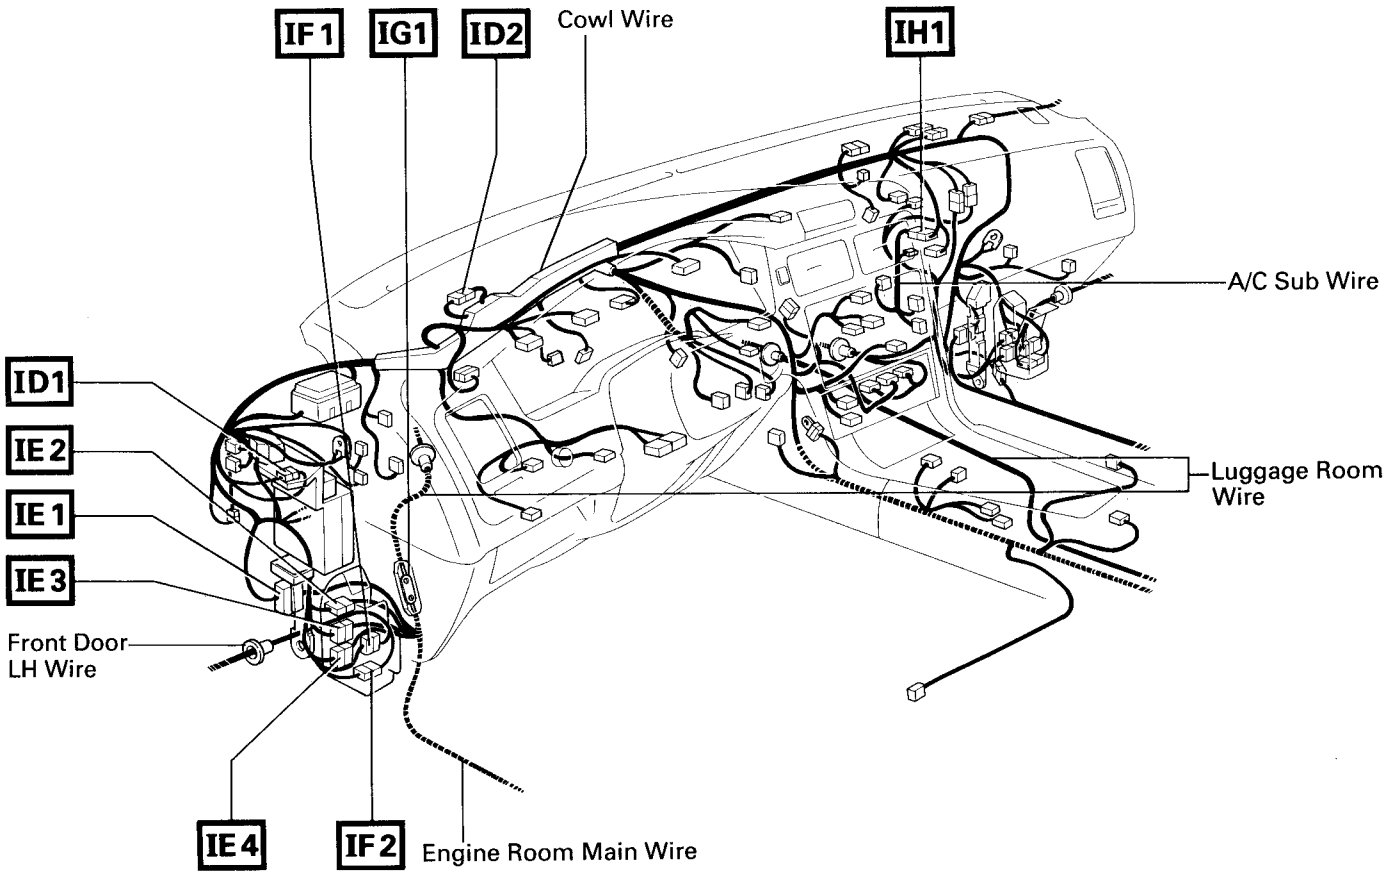

▽ : Location of Ground Points

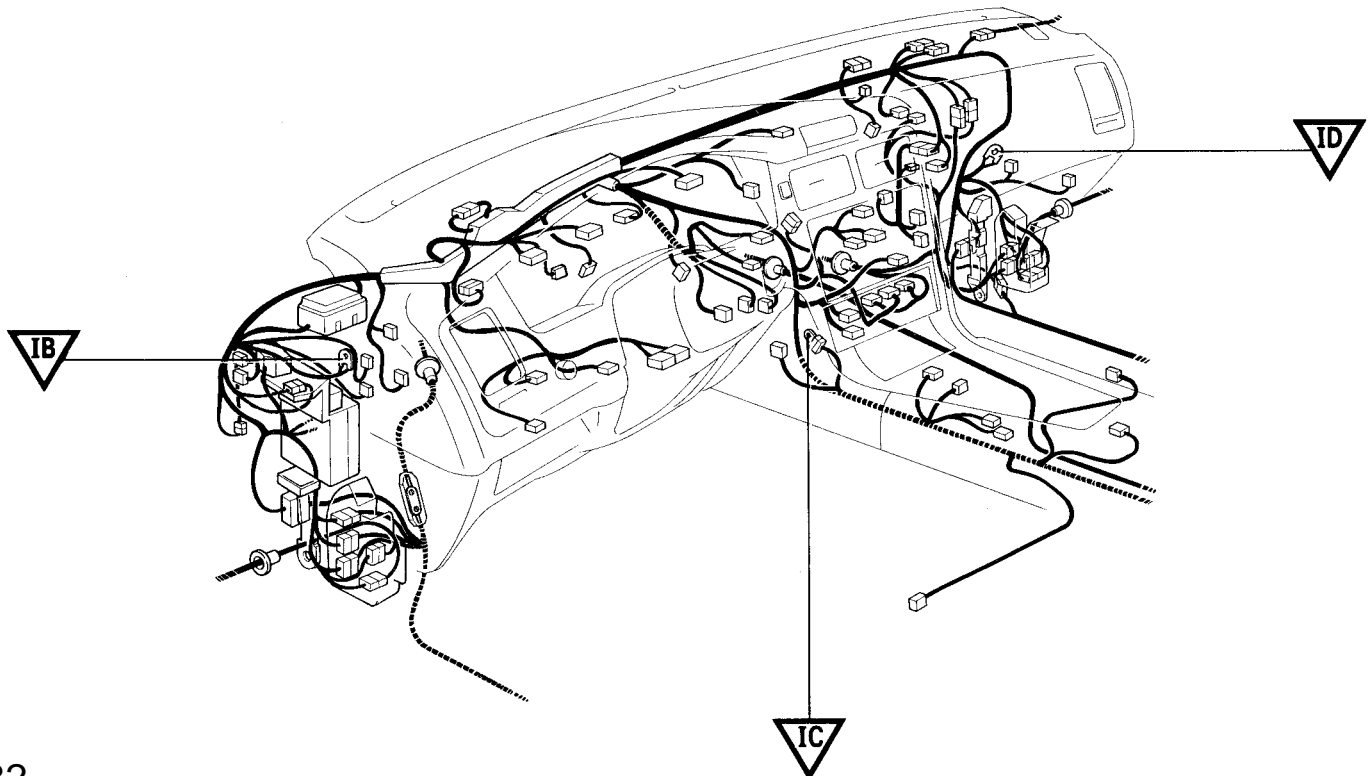


# Connector Joining Wire Harness and Wire Harness

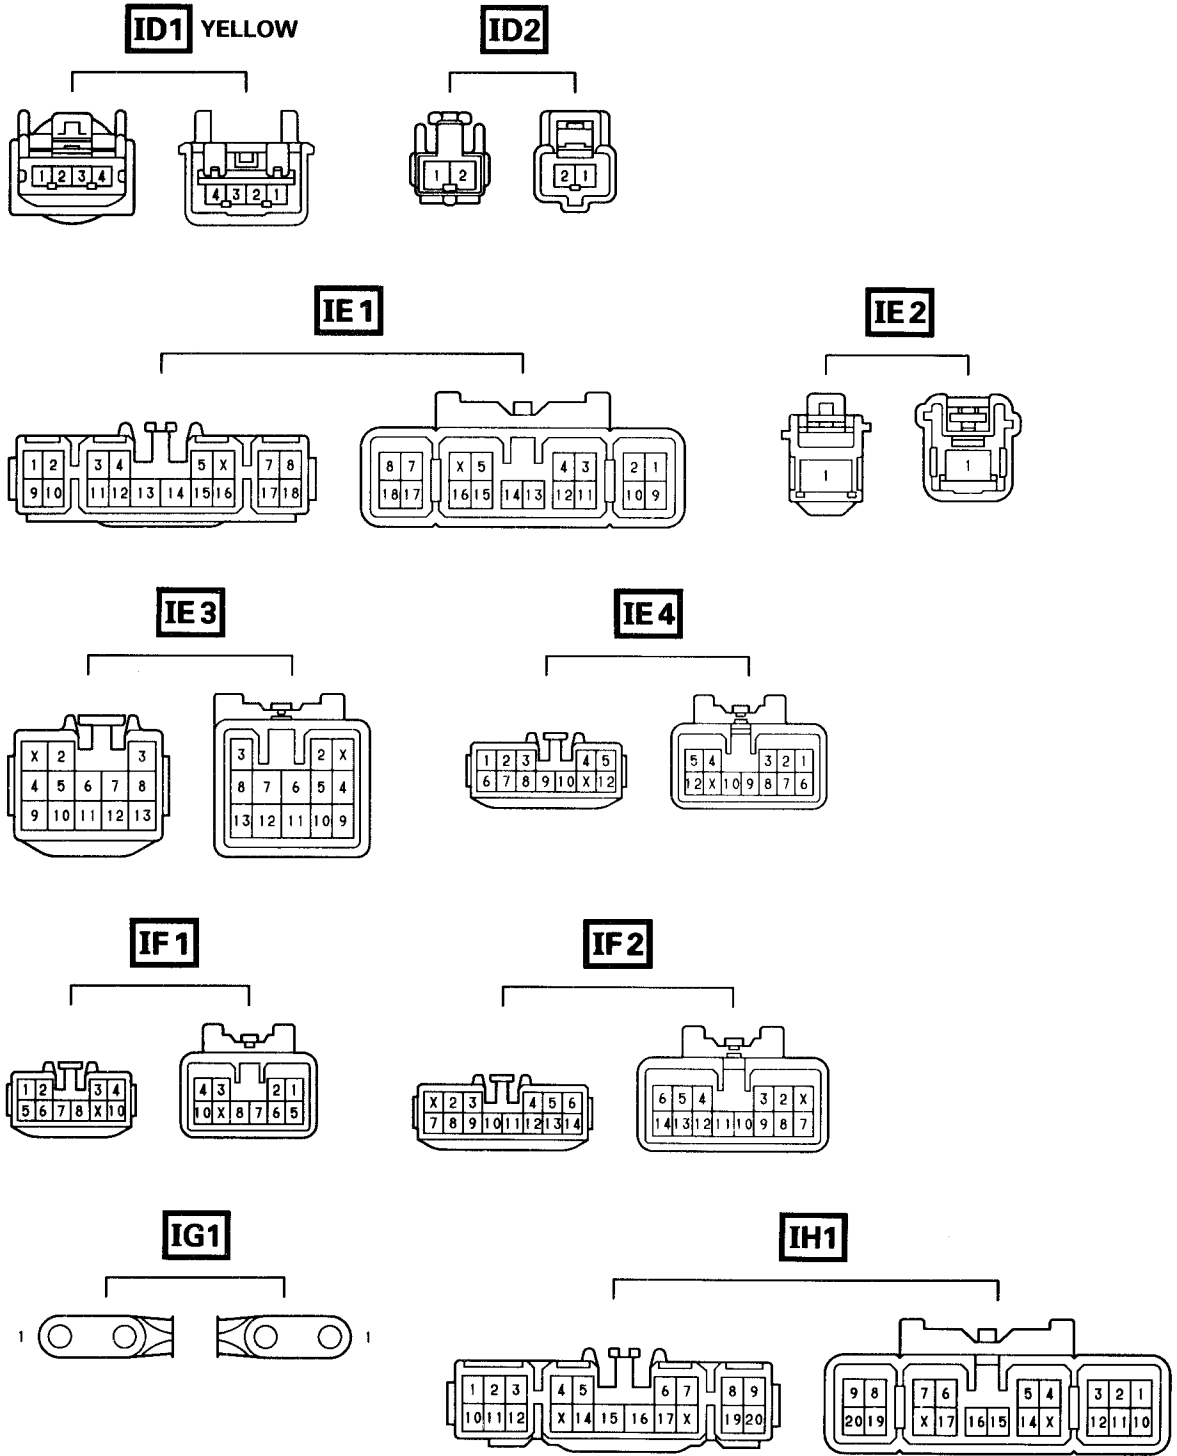


CODE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
ID1	COWL WIRE AND COWL WIRE (NEAR THE R/B NO. 1)
ID2	COWL WIRE AND COWL WIRE (BEHIND COMBINATION METER)
IE1	ENGINE ROOM MAIN WIRE AND COWL WIRE (LEFT KICK PANEL)
IE2	
IE3	
IE4	
IF1	FRONT DOOR LH WIRE AND COWL WIRE (LEFT KICK PANEL)
IF2	
IG1	LUGGAGE ROOM WIRE AND ENGINE ROOM MAIN WIRE (BEHIND FOOTREST)
IH1	COWL WIRE AND A/C SUB WIRE (INSTRUMENT PANEL RIGHT)

# ELECTRICAL WIRING ROUTING

□ : Location of Connector Joining Wire Harness and Wire Harness

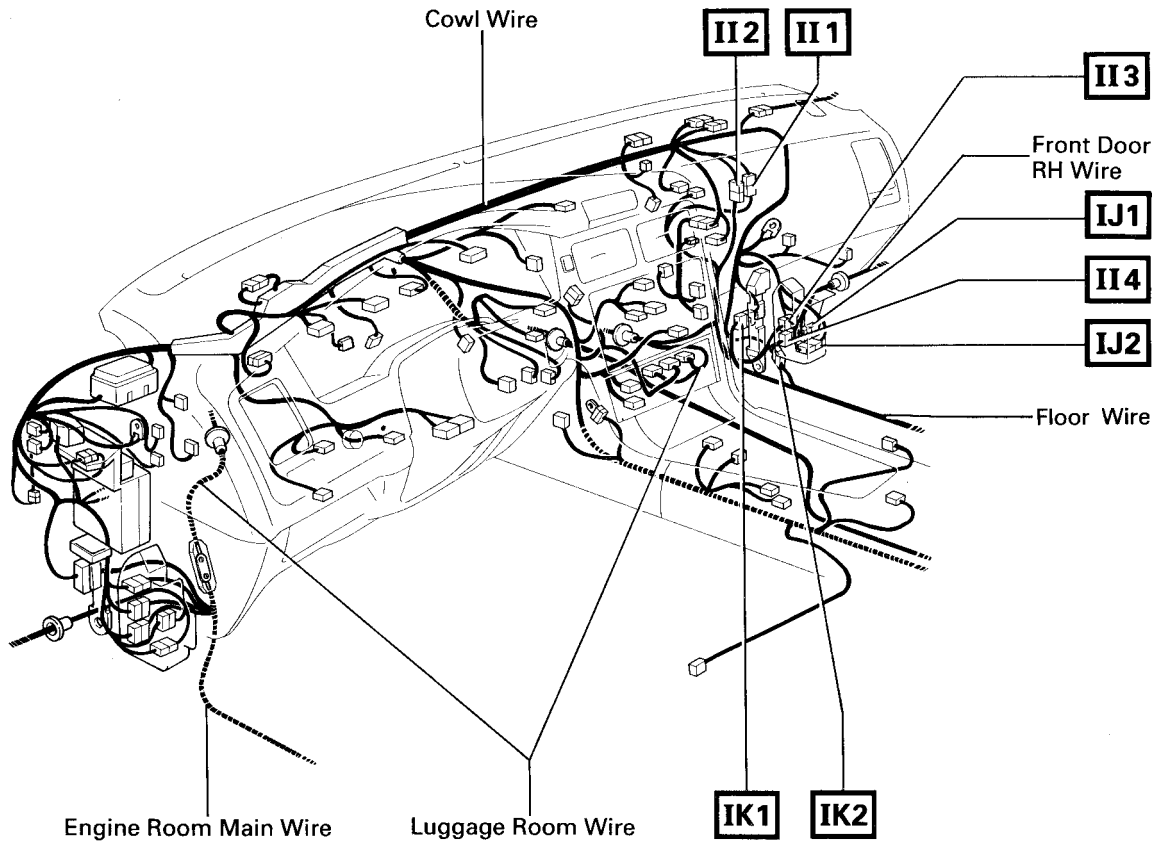


○ : Location of Splice Points

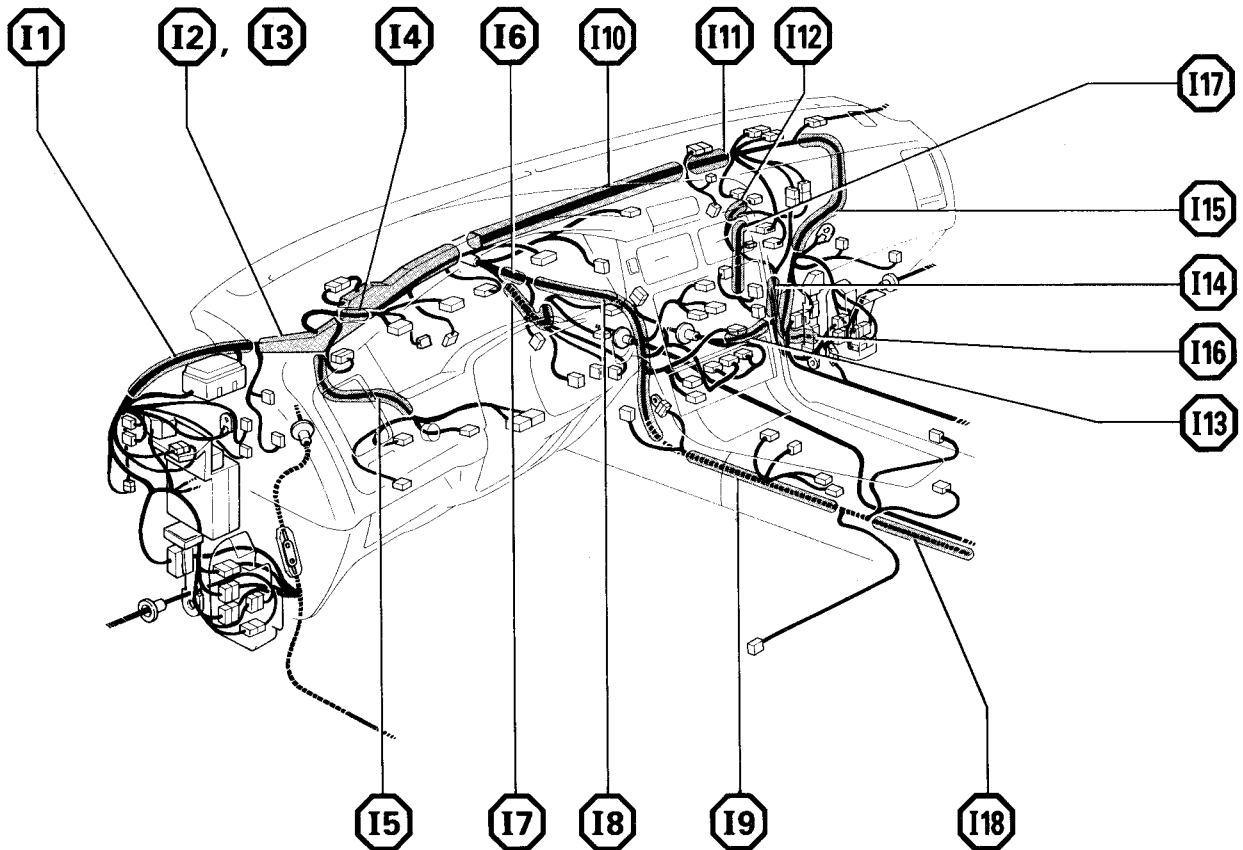


# Connector Joining Wire Harness and Wire Harness


**II1**

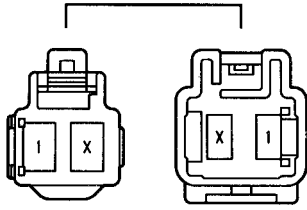


**II2**

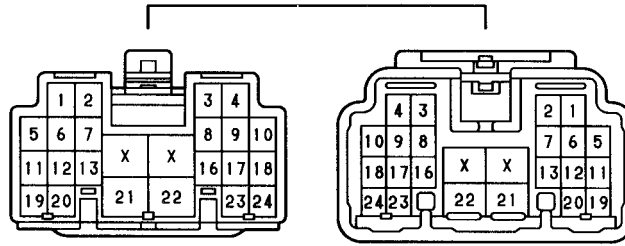


**II3** BLUE

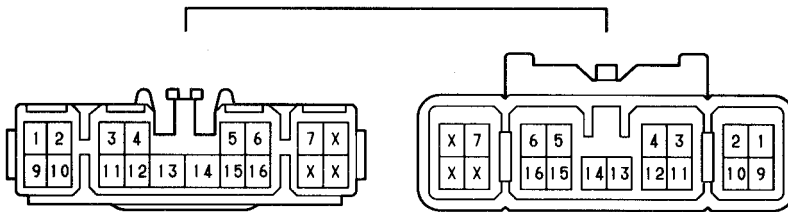


**II4**

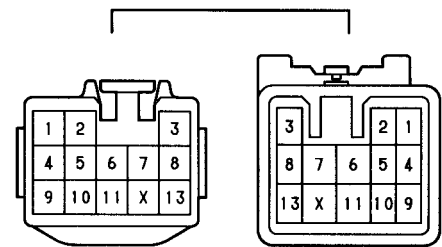


**IJ1**

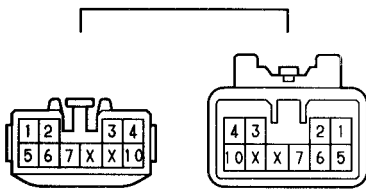


**IJ2**

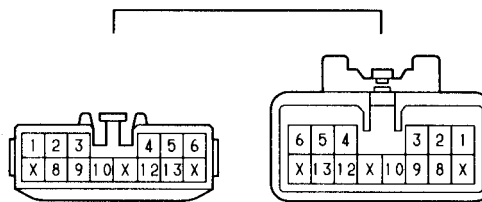

**IK1**

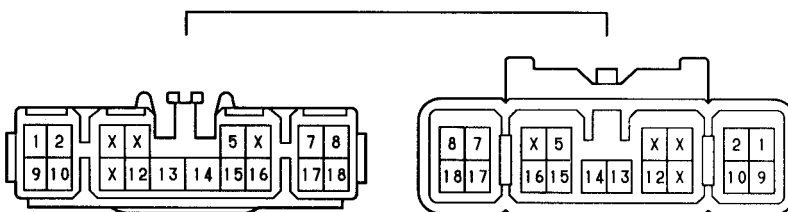

**IK2**

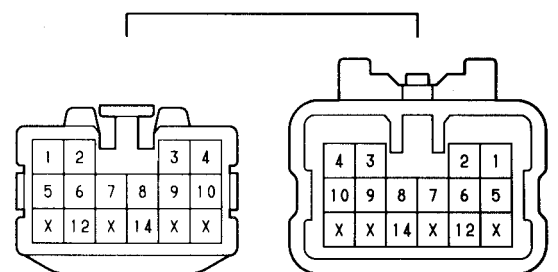


CODE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
II1	LUGGAGE ROOM WIRE AND COWL WIRE (RIGHT KICK PANEL)
II2	
II3	
II4	
IJ1	FRONT DOOR RH WIRE AND COWL WIRE (RIGHT KICK PANEL)
IJ2	
IK1	FLOOR WIRE AND COWL WIRE (RIGHT KICK PANEL)
IK2	




# ELECTRICAL WIRING ROUTING


- : Location of Connector Joining Wire Harness and Wire Harness
- ▽ : Location of Ground Points

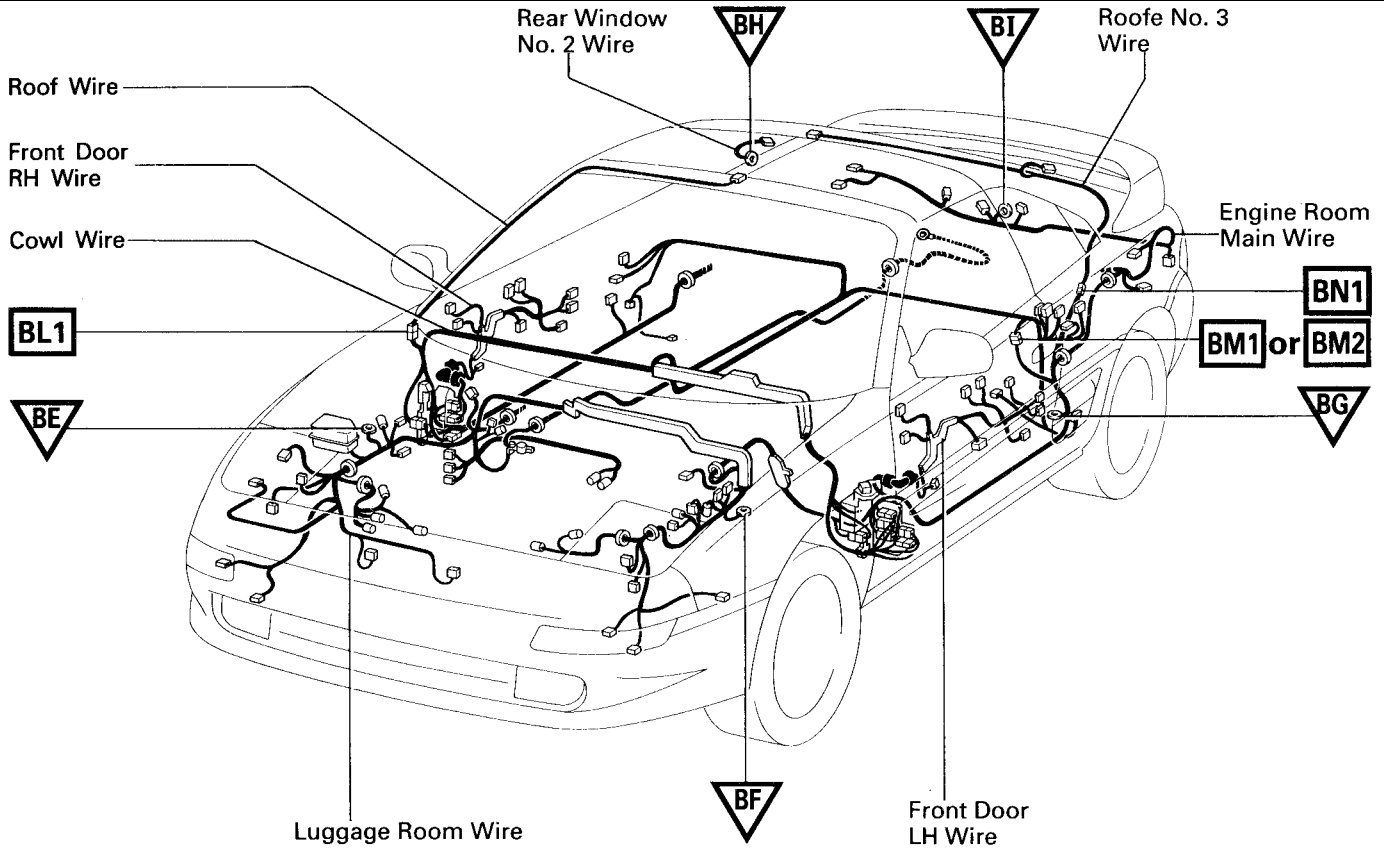

- : Location of Splice Points

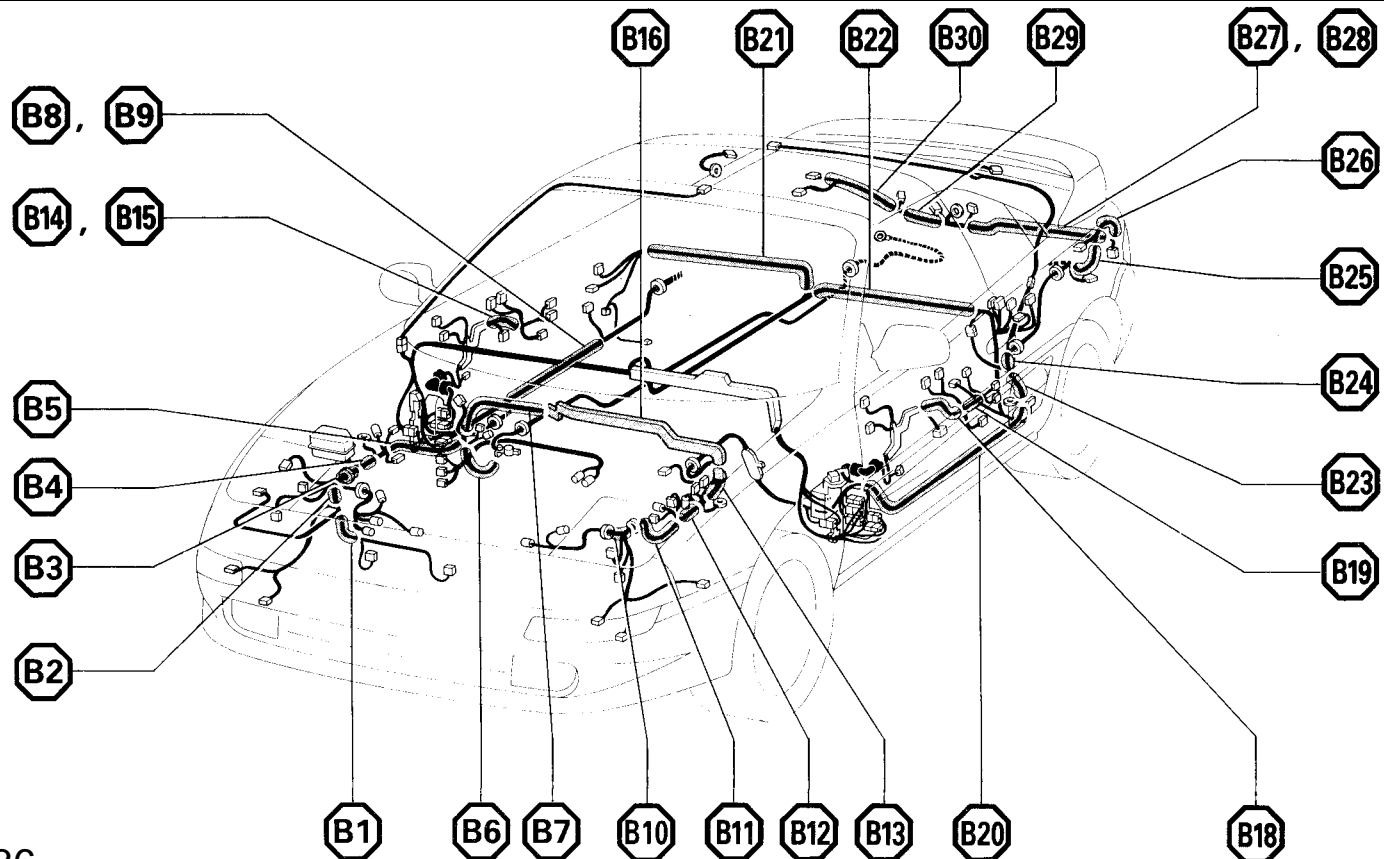

# Connector Joining Wire Harness and Wire Harness

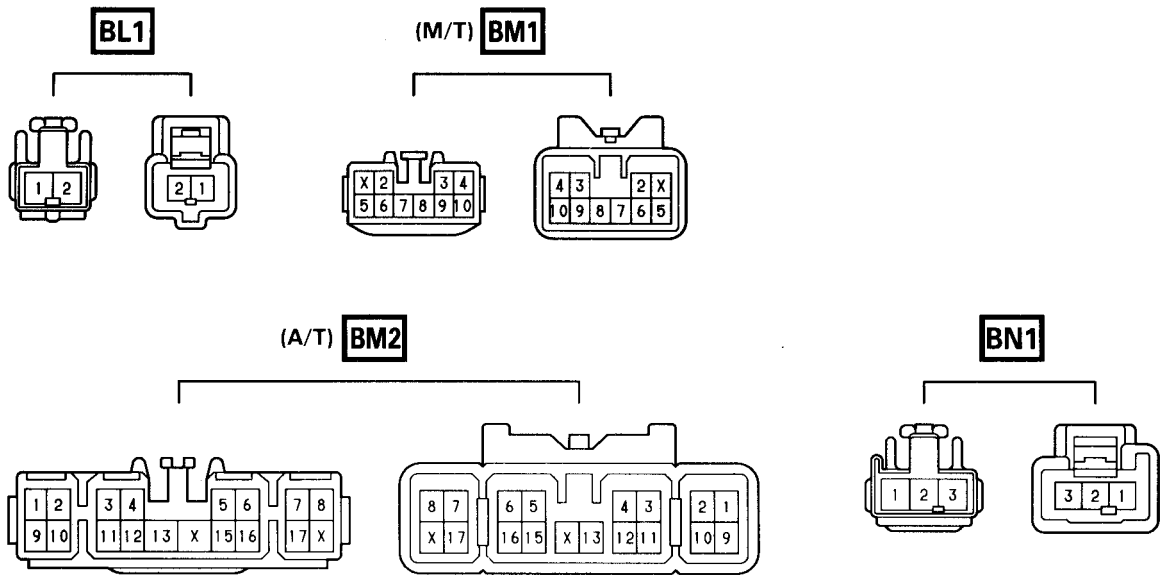

CODE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
<b>BL1</b>	ROOF WIRE AND COWL WIRE (UNDER THE RIGHT FRONT PILLAR)
<b>BM1</b>	ENGINE ROOM MAIN WIRE AND COWL WIRE (ROOM PARTITION BOARD LEFT)
<b>BM2</b>	ENGINE ROOM MAIN WIRE AND COWL WIRE (ROOM PARTITION BOARD LEFT)
<b>BN1</b>	ROOF NO.3 WIRE AND ENGINE ROOM MAIN WIRE (ROOM PARTITION BOARD LEFT)