

SERVICE HINTS

COOLING FAN RELAY

- 1-GROUND : APPROX. 12 VOLTS WITH IGNITION SW AT **ON** OR **ST** POSITION
 3-4 : OPEN WITH IGNITION SW AT **ON** OR **ST** POSITION AND ENGINE COMPARTMENT TEMP. BELOW 55°C (131°F)

C 3 COOLING FAN ECU

- 1-GROUND: ALWAYS CONTINUITY
 3-1 : APPROX. 12 VOLTS WITH IGNITION SW AT **ON** POSITION
 9-1 : 0 VOLTS WITH IGNITION SW AT **ON** OR **ST** POSITION AND ENGINE COMPARTMENT TEMP. MORE THAN 70°C (158°F)

○ : PARTS LOCATION

CODE	SEE PAGE	CODE	SEE PAGE	CODE	SEE PAGE
C 3	25 (3S-GTE)	C11	B 26	J 1	26
C 4	25 (3S-GTE)	E 5	25 (3S-GTE)		
C10	A 26	I11	26		

○ : RELAY BLOCKS

CODE	SEE PAGE	RELAY BLOCKS (RELAY BLOCK LOCATION)
1	20	R/B NO. 1 (LEFT KICK PANEL)
2	21	R/B NO. 2 (ENGINE COMPARTMENT LEFT)

○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

CODE	SEE PAGE	JUNCTION BLOCK AND WIRE HARNESS (CONNECTOR LOCATION)
3A	22	COWL WIRE AND J/B NO. 3 (BEHIND COMBINATION METER)
3C		
3D		

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

CODE	SEE PAGE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
EA1	30 (3S-GTE)	ENGINE ROOM MAIN WIRE AND ENGINE WIRE (REAR LUGGAGE COMPARTMENT LEFT)
EB1	30 (3S-GTE)	ENGINE WIRE AND R/B NO. 2 (R/B NO. 2 INNER)
IE1	32	ENGINE ROOM MAIN WIRE AND COWL WIRE (LEFT KICK PANEL)
IE4		
I13	34	LUGGAGE ROOM WIRE AND COWL WIRE (RIGHT KICK PANEL)

▽ : GROUND POINTS

CODE	SEE PAGE	GROUND POINTS LOCATION
EA	30 (3S-GTE)	INTAKE MANIFOLD


○ : SPLICE POINTS

CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS	CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS
E17	30 (3S-GTE)	ENGINE WIRE	I10	34	COWL WIRE


C 3 GRAY




C 4 GRAY

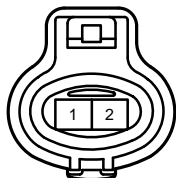

C10 (A) BROWN

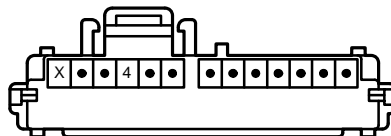


C11 (B) BLUE

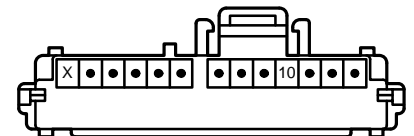

E 5 BLACK



I11 BLACK

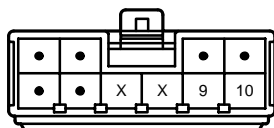

J 1

