


FOG LIGHT (FOR USA)

*1 : (1) A/T
 (2) WITH CRUISE CONTROL, ABS POWER WINDOW OR
 WOOFER SPEAKER

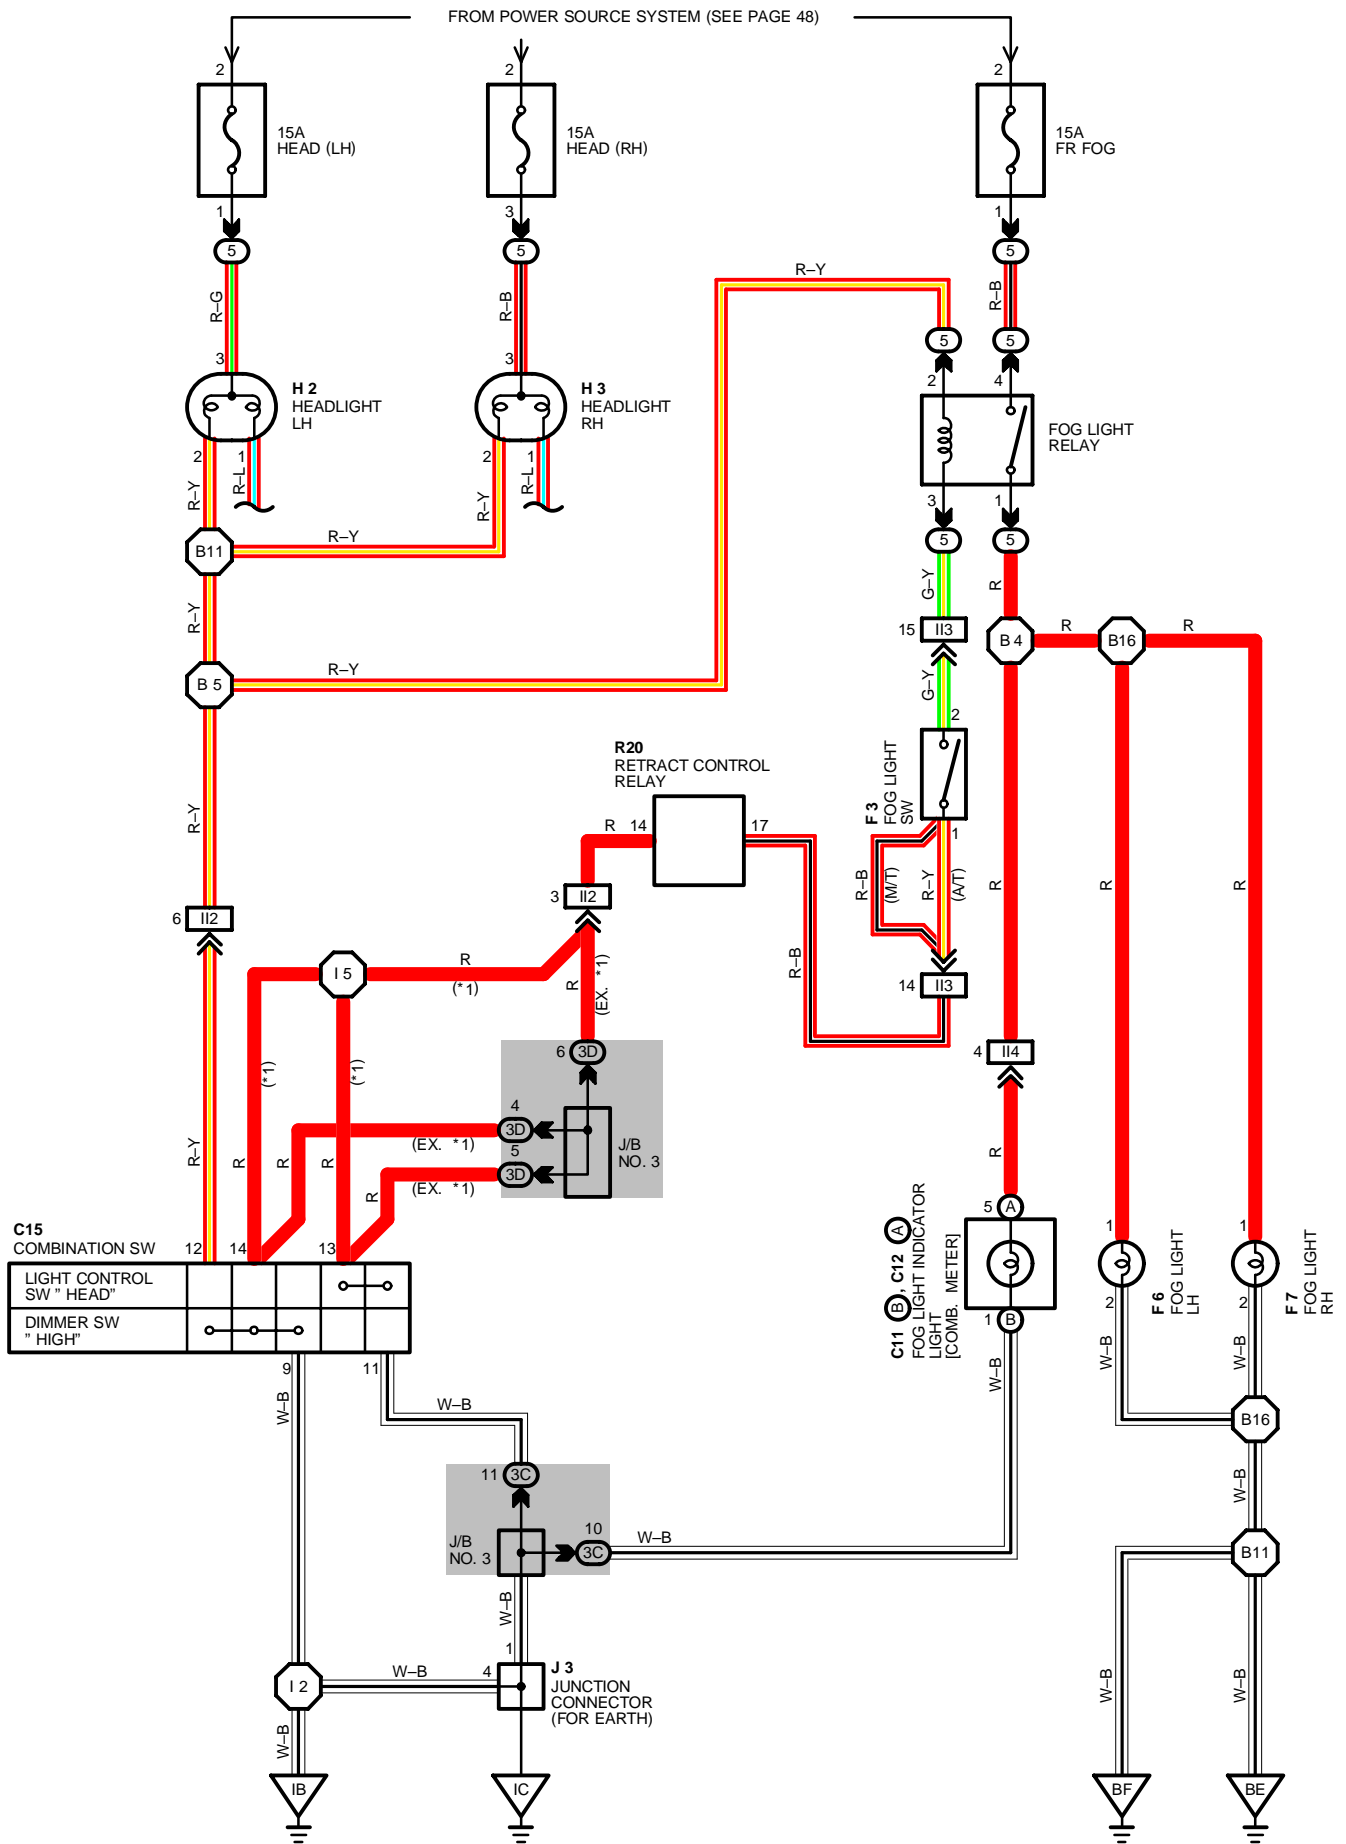

SERVICE HINTS

C15 COMBINATION SW

9-12: CLOSED WITH DIMMER SW AT **HIGH** OR **FLASH** POSITION

FOG LIGHT RELAY

(5) 4- (5) 3 : CLOSED WITH LIGHT CONTROL SW AT **HEAD** POSITION, DIMMER SW AT **LOW** POSITION AND FOG LIGHT SW ON

○ : PARTS LOCATION

CODE	SEE PAGE	CODE	SEE PAGE	CODE	SEE PAGE
C15	26	F 7	27	J 3	26
F 3	26	H 2	27	R20	27
F 6	27	H 3	27		

○ : RELAY BLOCKS

CODE	SEE PAGE	RELAY BLOCKS (RELAY BLOCK LOCATION)
5	21	R/B NO. 5 (FRONT LUGGAGE COMPARTMENT RIGHT)

○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

CODE	SEE PAGE	JUNCTION BLOCK AND WIRE HARNESS (CONNECTOR LOCATION)
3C 3D	22	COWL WIRE AND J/B NO. 3 (BEHIND COMBINATION METER)

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

CODE	SEE PAGE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
II2	34	LUGGAGE ROOM WIRE AND COWL WIRE (RIGHT KICK PANEL)
II3 II4	34	COWL WIRE AND LUGGAGE ROOM WIRE (RIGHT KICK PANEL)


▽ : GROUND POINTS

CODE	SEE PAGE	GROUND POINTS LOCATION
IB	32	LEFT KICK PANEL
IC	32	INSTRUMENT PANEL BRACE LH
BE	36	FRONT RIGHT FENDER
BF	36	FRONT LEFT FENDER


○ : SPLICE POINTS

CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS	CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS
I 2	34	COWL WIRE	B 5	36	LUGGAGE ROOM WIRE
I 5			B11		
B 4	36	LUGGAGE ROOM WIRE	B16		


C11 (B) BLUE

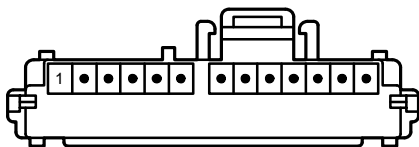


C12 (A) GRAY

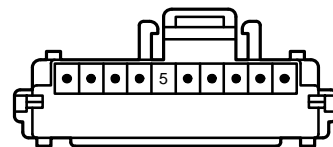


C15 BLACK

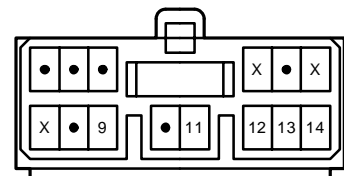


F 3

 


F 6, F 7 BLACK

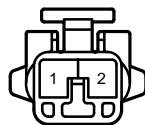

H 2, H 3 BLACK

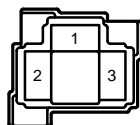

J 3

 

R20

