


BACK-UP LIGHT

FROM POWER SOURCE SYSTEM (SEE PAGE 48)

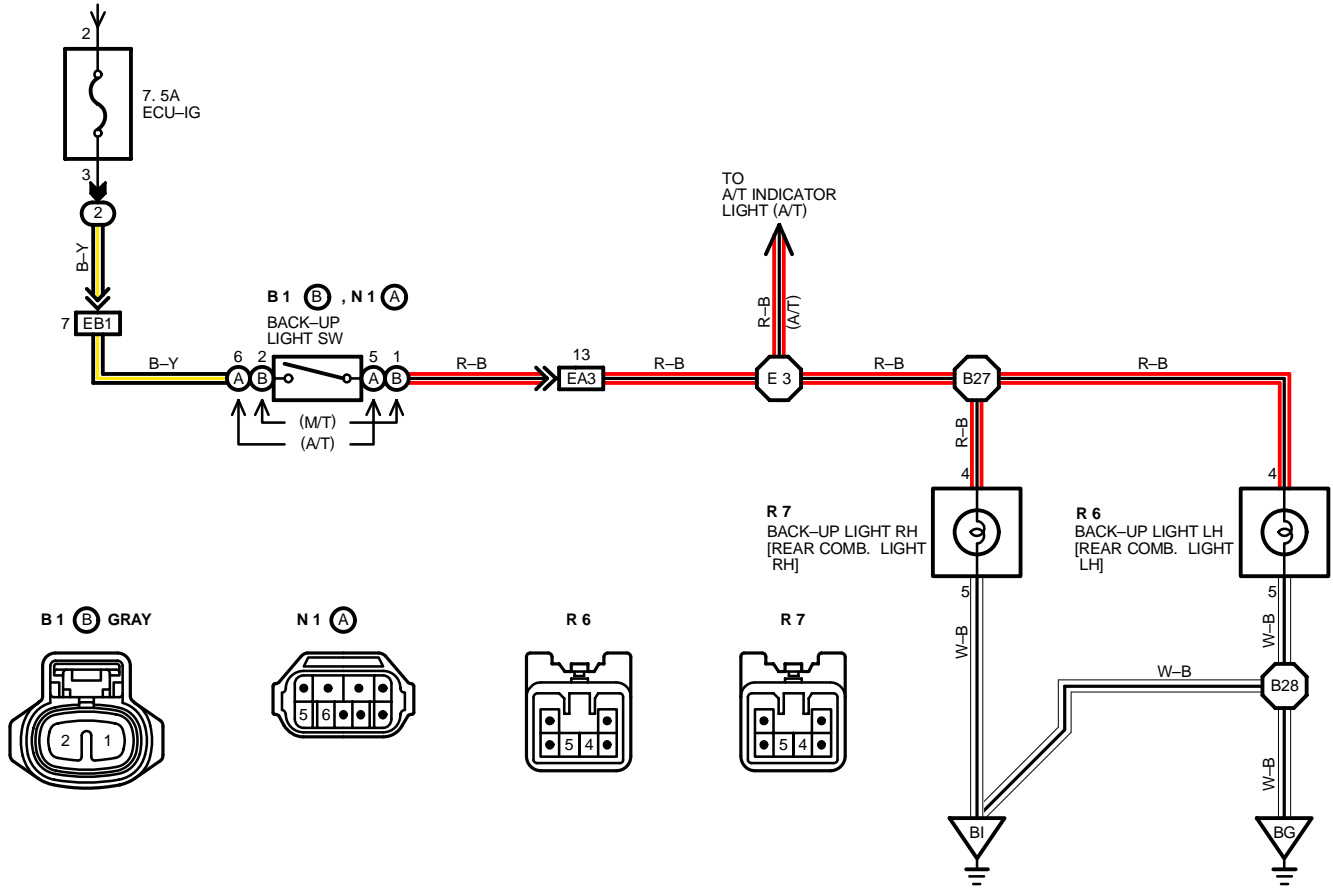

SERVICE HINTS

B 1(B), N 1(A) BACK-UP LIGHT SW
 (A) 6-5, (B) 2-1 : CLOSED WITH SHIFT LEVER IN R POSITION

○ : PARTS LOCATION

CODE	SEE PAGE	CODE	SEE PAGE	CODE	SEE PAGE
B 1	B	24 (5S-FE), 25 (3S-GTE)	R 6	27	
N 1	A	24 (5S-FE)	R 7	27	

□ : RELAY BLOCKS

CODE	SEE PAGE	RELAY BLOCKS (RELAY BLOCK LOCATION)
2	20	R/B NO. 2 (ENGINE COMPARTMENT LEFT)

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

CODE	SEE PAGE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
EA3	28 (5S-FE) 30 (3S-GTE)	ENGINE WIRE AND ENGINE ROOM MAIN WIRE (R/B NO.2 INNER)
EB1	28 (5S-FE) 30 (3S-GTE)	ENGINE WIRE AND R/B NO. 2 (R/B NO. 2 INNER)

▽ : GROUND POINTS

CODE	SEE PAGE	GROUND POINTS LOCATION
BG	36	UNDER THE LEFT CENTER PILLAR
BI	36	BACK PANEL CENTER

○ : SPLICE POINTS

CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS	CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS
E 3	28 (5S-FE) 30 (3S-GTE)	ENGINE ROOM MAIN WIRE	B27	32	ENGINE ROOM MAIN WIRE
			B28		