


REMOTE CONTROL MIRROR

*1 : (1) CANADA
 (2) USA (A/T)
 (3) USA (M/T) WITH CRUISE CONTROL, ABS,
 POWER WINDOW OR WOOFER SPEAKER

FROM POWER SOURCE SYSTEM (SEE PAGE 48)

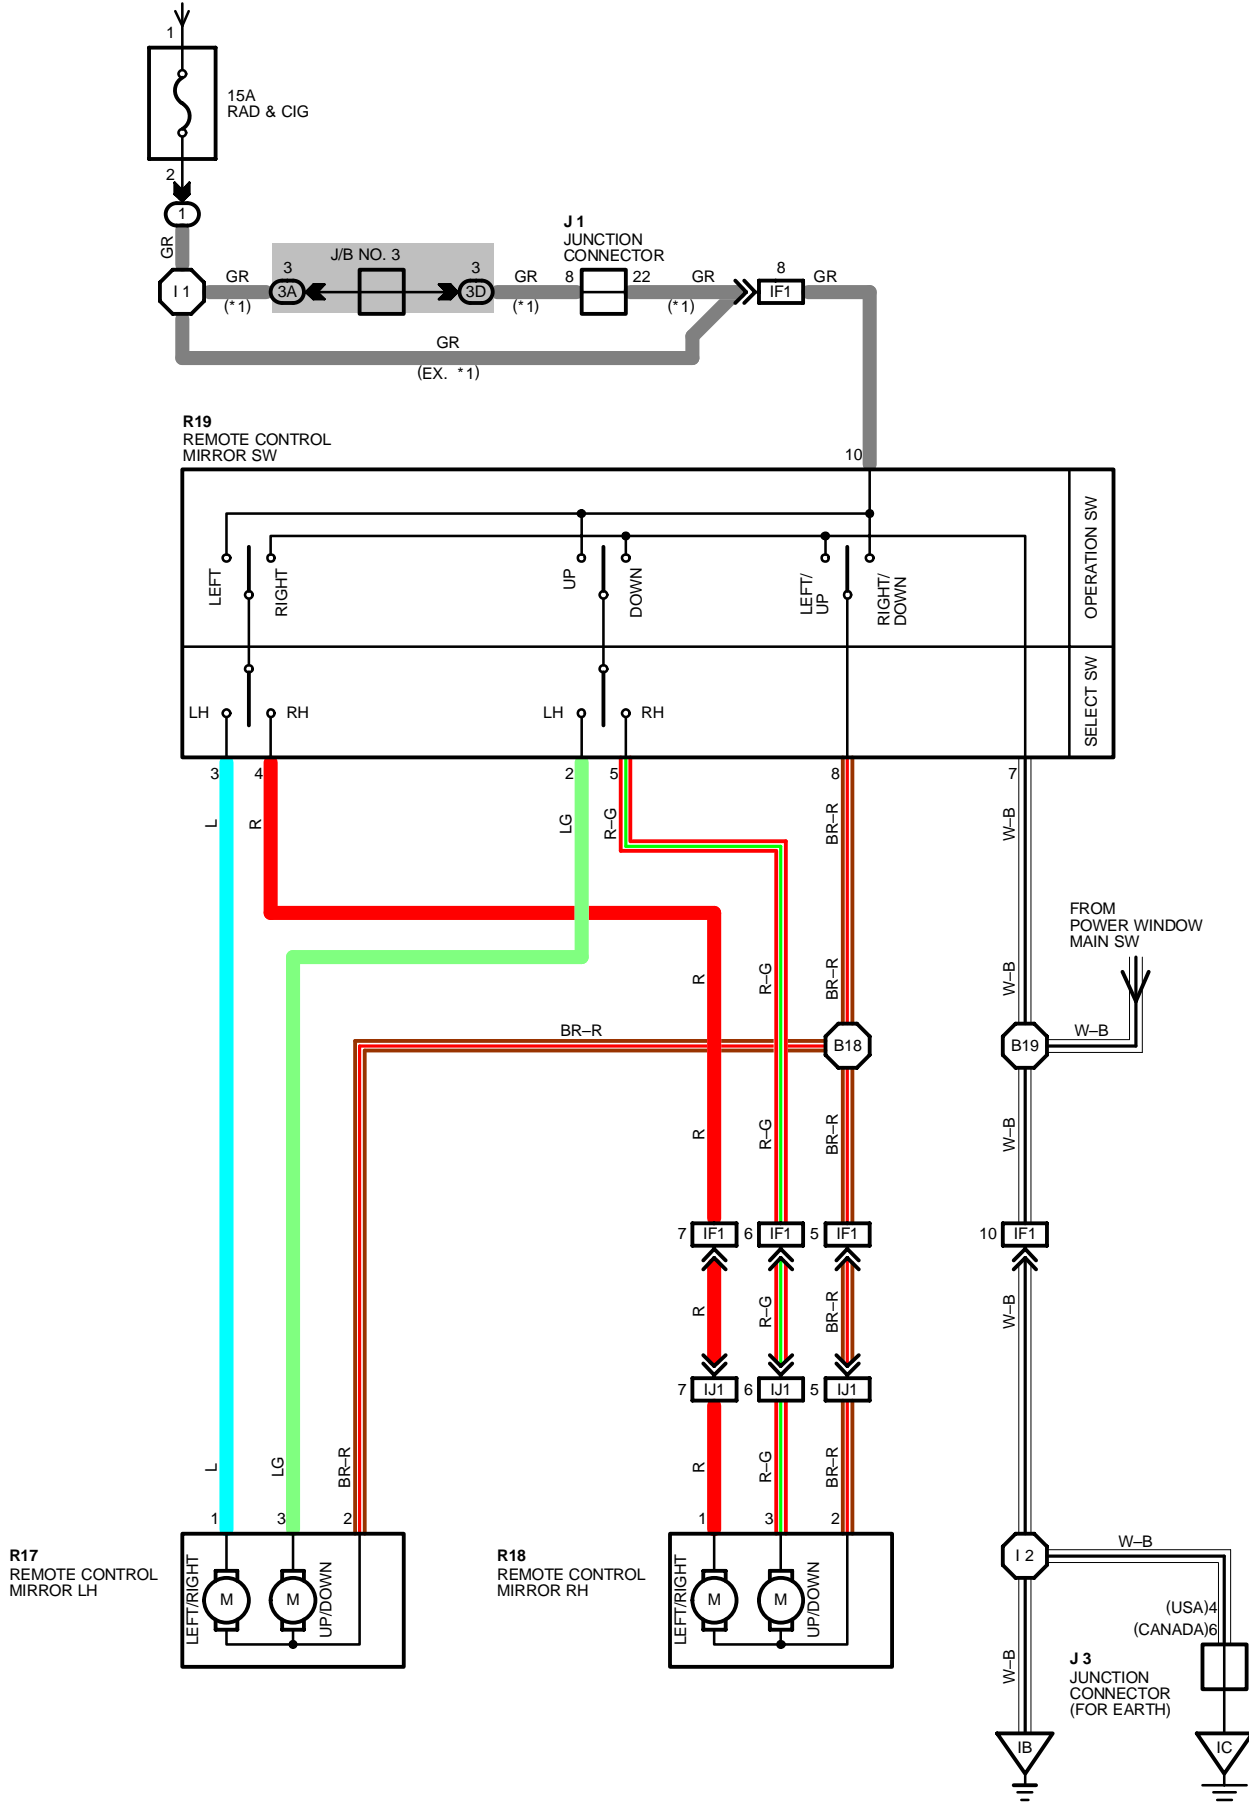

SERVICE HINTS

R19 REMOTE CONTROL MIRROR SW

- 10-GROUND : APPROX. 12 VOLTS WITH IGNITION SW AT **ACC** OR **ON** POSITION
- 8-7 : CONTINUITY WITH OPERATION SW AT **UP** OR **LEFT** POSITION
- 10-8 : CONTINUITY WITH OPERATION SW AT **DOWN** OR **RIGHT** POSITION

○ : PARTS LOCATION

CODE	SEE PAGE	CODE	SEE PAGE	CODE	SEE PAGE
J 1	26	R17	27	R19	27
J 3	26	R18	27		

○ : RELAY BLOCKS

CODE	SEE PAGE	RELAY BLOCKS (RELAY BLOCK LOCATION)
1	20	R/B NO. 1 (LEFT KICK PANEL)

○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

CODE	SEE PAGE	JUNCTION BLOCK AND WIRE HARNESS (CONNECTOR LOCATION)
3A	22	COWL WIRE AND J/B NO. 3 (BEHIND COMBINATION METER)
3D		

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

CODE	SEE PAGE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
IF1	32	COWL WIRE AND FRONT DOOR LH WIRE (LEFT KICK PANEL)
IJ1	34	COWL WIRE AND FRONT DOOR RH WIRE (RIGHT KICK PANEL)

▽ : GROUND POINTS

CODE	SEE PAGE	GROUND POINTS LOCATION
IB	32	LEFT KICK PANEL
IC	32	INSTRUMENT PANEL BRACE LH

○ : SPLICE POINTS

CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS	CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS
I 2	34	COWL WIRE	B19	36	FRONT DOOR LH WIRE
B18	36	FRONT DOOR RH WIRE			

