

SERVICE HINTS

DEFOGGER RELAY

4-1 : CLOSED WITH IGNITION SW ON AND DEFOGGER SW ON

A10 DEFOGGER SW [A/C CONTROL ASSEMBLY]

10-GROUND: APPROX. 12 VOLTS WITH IGNITION SW AT ON POSITION

10-11 : CLOSED WITH DEFOGGER SW ON

○ : PARTS LOCATION

CODE	SEE PAGE	CODE	SEE PAGE	CODE	SEE PAGE
A10	26	J 3	26	R14 B	27
D 2	26	R13 A	27		

○ : RELAY BLOCKS

CODE	SEE PAGE	RELAY BLOCKS (RELAY BLOCK LOCATION)
1	20	R/B NO. 1 (LEFT KICK PANEL)

○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

CODE	SEE PAGE	JUNCTION BLOCK AND WIRE HARNESS (CONNECTOR LOCATION)
3A	22	COWL WIRE AND J/B NO. 3 (BEHIND COMBINATION METER)

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

CODE	SEE PAGE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
IE1	32	ENGINE ROOM MAIN WIRE AND COWL WIRE (LEFT KICK PANEL)
BN1	36	ROOF NO.3 WIRE AND ENGINE ROOM MAIN WIRE

▽ : GROUND POINTS

CODE	SEE PAGE	GROUND POINTS LOCATION
IC	32	INSTRUMENT PANEL BRACE LH
BH	36	UNDER THE RIGHT REAR PILLAR

