


RADIO AND PLAYER (w/o WOOFER SPEAKER)

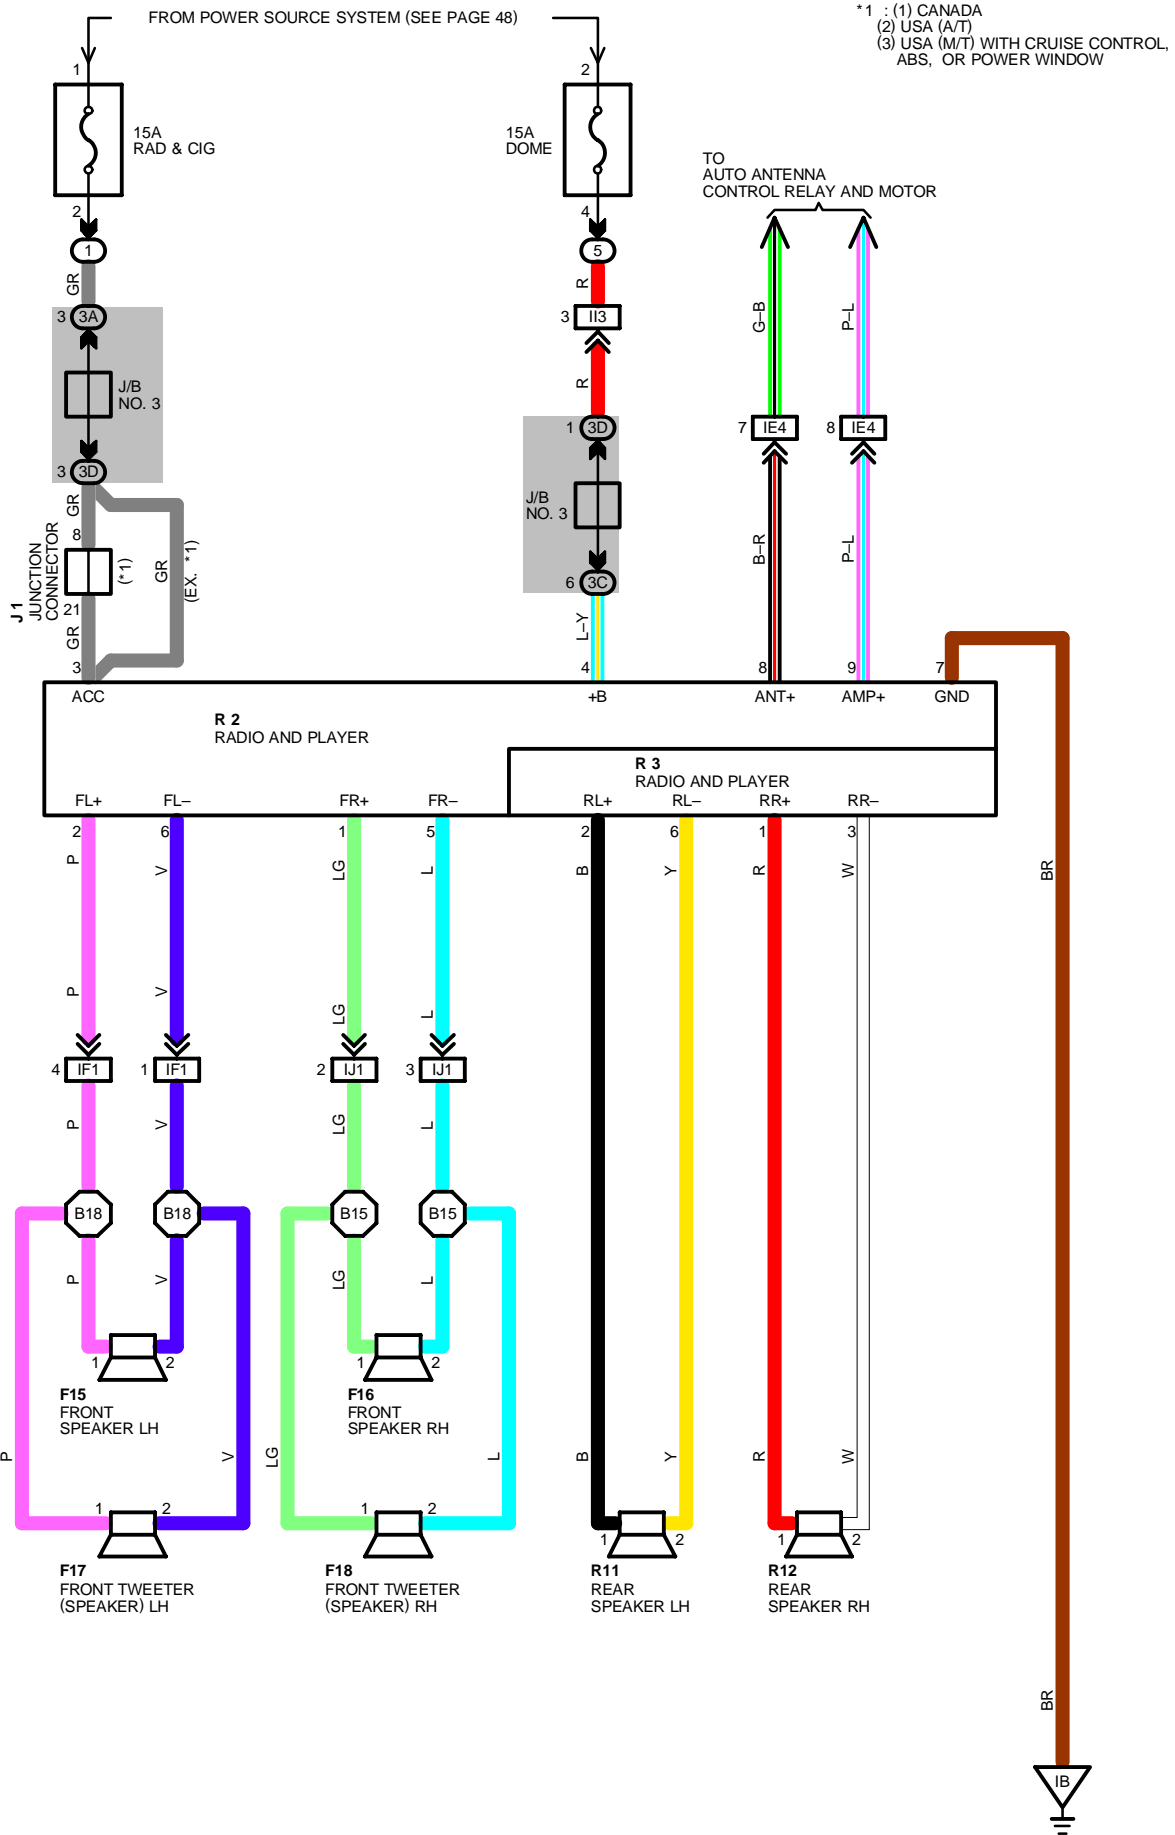

SERVICE HINTS

R 2 RADIO AND PLAYER

- 4-GROUND : ALWAYS APPROX. 12 VOLTS
- 3-GROUND : APPROX. 12 VOLTS WITH IGNITION SW AT ON OR ACC POSITION
- 7-GROUND : ALWAYS CONTINUITY

○ : PARTS LOCATION

CODE	SEE PAGE	CODE	SEE PAGE	CODE	SEE PAGE
F15	27	F18	27	R 3	26
F16	27	J 1	26	R11	27
F17	27	R 2	26	R12	27

○ : RELAY BLOCKS

CODE	SEE PAGE	RELAY BLOCKS (RELAY BLOCK LOCATION)
1	20	R/B NO. 1 (LEFT KICK PANEL)
5	21	R/B NO. 5 (FRONT LUGGAGE COMPARTMENT RIGHT)

○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

CODE	SEE PAGE	JUNCTION BLOCK AND WIRE HARNESS (CONNECTOR LOCATION)
3A	22	COWL WIRE AND J/B NO. 3 (BEHIND COMBINATION METER)
3C		
3D		

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

CODE	SEE PAGE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
IE4	32	ENGINE ROOM MAIN WIRE AND COWL WIRE (LEFT KICK PANEL)
IF1	32	COWL WIRE AND FRONT DOOR LH WIRE (LEFT KICK PANEL)
IJ3	34	COWL WIRE AND LUGGAGE ROOM WIRE (RIGHT KICK PANEL)
IJ1	34	COWL WIRE AND FRONT DOOR RH WIRE (RIGHT KICK PANEL)

▽ : GROUND POINTS

CODE	SEE PAGE	GROUND POINTS LOCATION
IB	32	LEFT KICK PANEL

○ : SPLICE POINTS

CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS	CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS
B15	36	FRONT DOOR RH WIRE	B18	36	FRONT DOOR RH WIRE


F15, F16 GRAY




F17, F18




J 1

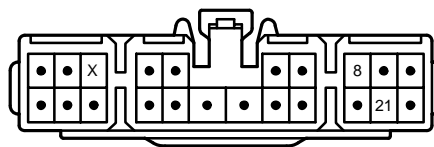

R 2

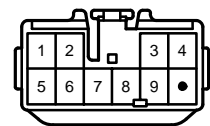

R 3

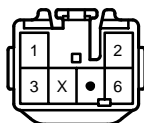

R11, R12

