
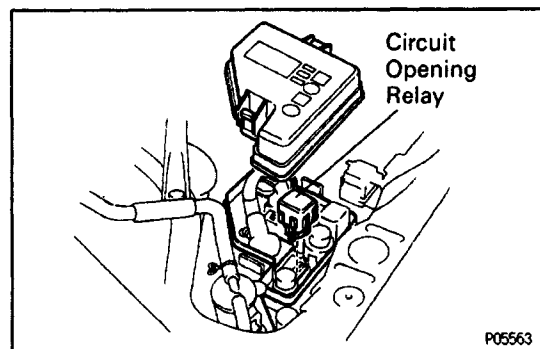


# CIRCUIT OPENING RELAY

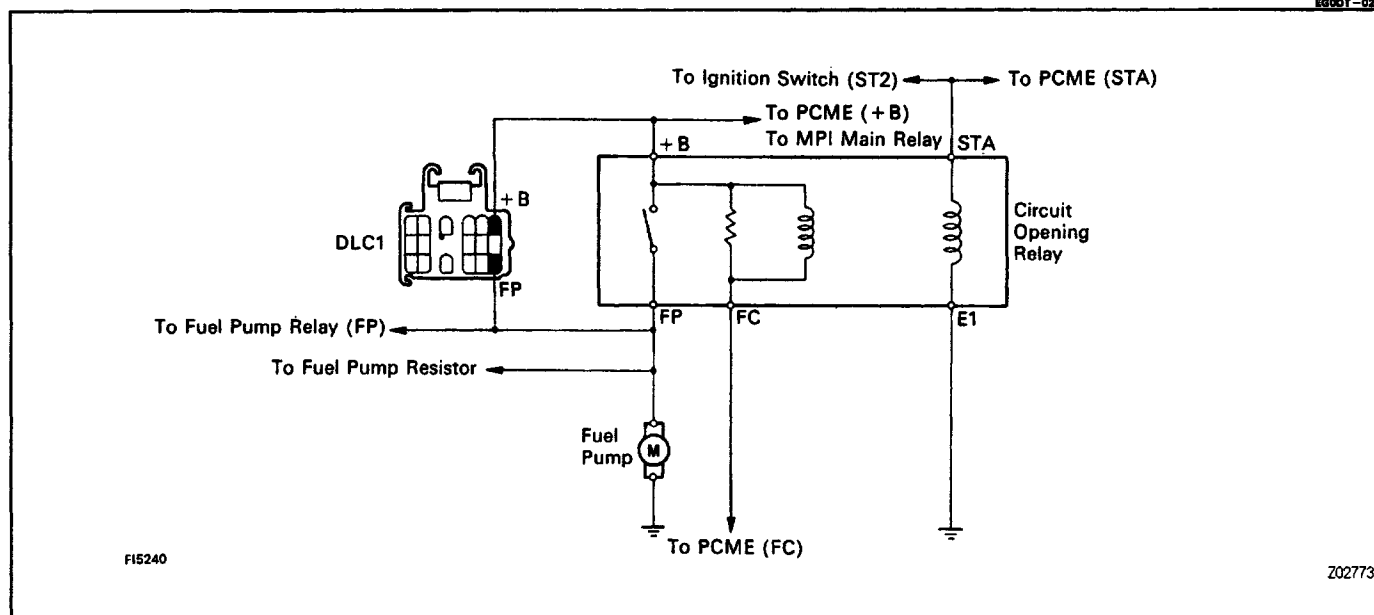

## CIRCUIT OPENING RELAY ("C/OPN") INSPECTION

### 1. REMOVE CIRCUIT OPENING RELAY

### 2. INSPECT CIRCUIT OPENING RELAY

#### A. Inspect relay continuity

- (a) Using an ohmmeter, check that there is continuity between terminals STA and E1.
- (b) Check that there is continuity between terminals +B and FC.
- (c) Check that there is no continuity between terminals +B and FP.

If continuity is not as specified, replace the relay.

#### B. Inspect relay operation

- (a) Apply battery voltage across terminals STA and E1.
- (b) Using an ohmmeter, check that there is continuity between terminals +B and FP.

If operation is not as specified, replace the relay.

### 3. REINSTALL CIRCUIT OPENING RELAY

