

 


 



 
 


# PREPARATION

## SST (SPECIAL SERVICE TOOLS)

AX06J-01

	<p>09308-00010 Oil Seal Puller</p>	<p>Remove side gear shaft oil seal.</p>
	<p>09350-32014 TOYOTA Automatic Transmission Tool Set</p>	
	<p>(09351-32010) One-way Clutch Test Tool</p>	
	<p>(09351-32020) Stator Stopper</p>	
	<p>(09351-32111) Side Bearing Race Replacer</p>	
	<p>(09351-32130) Handle</p>	
	<p>(09351-32150) Oil seal Replacer</p>	
	<p>09628-62011 Ball Joint Puller</p>	
	<p>09643-18020 Diagnosis Check Wire</p>	
	<p>09950-20017 Universal Puller</p>	
	<p>09992-00094 Automatic Transmission Oil Pressure Gauge Set</p>	<p>Line pressure</p>

## EQUIPMENT

Straight edge	Check torque converter installation.
Vernier calipers	Check torque converter installation.
Dial indicator or dial indicator with magnetic base	Measure drive plate runout.
Torque wrench	

## LUBRICANT

Item	Capacity	Classification
Automatic transaxle fluid (w/o Differential oil) Dry fill Drain and refill	8.0 liters (8.5 US qts, 7.0 Imp.qts) 3.3 liters (3.5 US qts, 2.9 Imp.qts)	ATF DEXRON* II

## SSM (SPECIAL SERVICE MATERIALS)

08833-00070 Adhesive 1324, THREE BOND 1324 or equivalent	Torque converter mounting bolt
---	--------------------------------