 
 


 



# STEERING COLUMN



## PREPARATION

### SST (SPECIAL SERVICE TOOLS)

	09609-20011 Steering Wheel Puller	
	09910-00015 Puller Set	
	(09911-00011) Puller Clamp	
	(09912-00010) Puller Slide Hammer	
	09950-20017 Universal Puller	
	(09956-00010) Tightening Piece	

SR074-01

### RECOMMENDED TOOLS

	09904-00010 Expander Set	For removing and installing snap ring
	(09904-00050) No. 4 Claw	

SR075-01

### EQUIPMENT

Torque wrench	
---------------	--