

TROUBLESHOOTING

You will find the cause of trouble more easily by properly using the table shown below. In this table, the numbers indicate the order of priority of the causes of trouble. Check each part in the order shown. If necessary, replace the part.

See page	AC-21	AC-18	AC-22	AC-8, 9	AC-8, 9	AC-8, 9	AC-56	AC-55	EG-305 378	AC-53	AC-53	EG-303, 375	AC-52	AC-48
Parts Name	Inspect Volume of Refrigerant	Inspect Refrigeration System with Manifold Gauge Set	Inspect Drive Belt Tension	Fusible Link (ALT)	Circuit Breaker (HEATER)	Fuse (A/C)	Pressure Switch	Thermistor	ECTS	Heater Main Relay	Magnetic Clutch Relay	Engine Main Relay and Fan	Relay No. 1, 2, 3 Blower Resistor	Air Inlet Servomotor
Trouble														
No blower operation				1	2						3		6	
No blower control														
No air flow mode control														
No air inlet control														2
Insufficient flow of cool air											1		3	
Insufficient flow of warm air											1		3	
No cool air comes out	3	4	5			1	6	12			2			
Cool air comes out intermittently	1	2	3					5						
Cool air comes out only at high engine speed	2	3	1											
Insufficient cooling	1	2	3					13	7			6		
No warm air comes out														
Air temp. control not functioning														
No engine idle up when A/C switch on														

